


alpha

Bluetooth Model

D260

Fingerprint Smart Door Knob

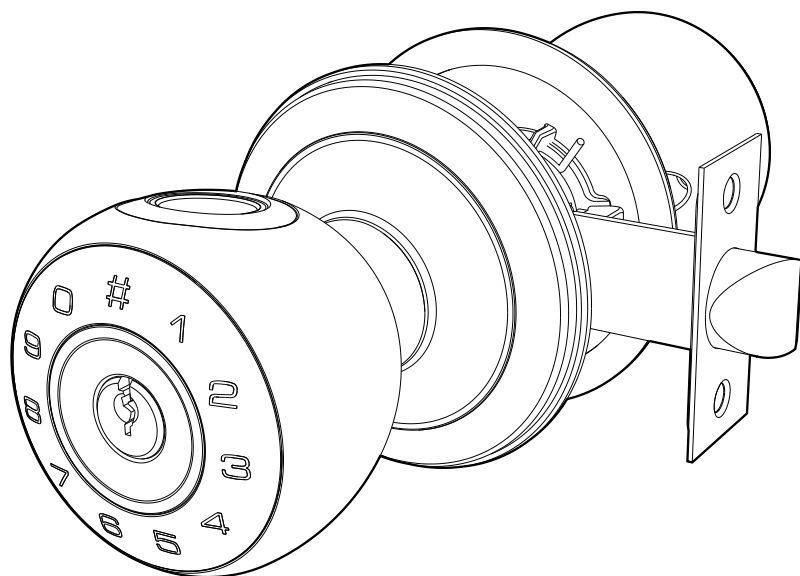

Operating Manual of American-Standard Lock

Please read and understand the operating manual before use.

Caution: Please take along an emergency key or put it in a safe place outside.

► Instructions for Use

Notice: Prepare screwdriver and a drilling machine before installation.

1. The new lock or the initial default password "123456" and all fingerprints can be unlocked.
2. When the lock is registered, only the registered user can unlocking the lock.
3. When unlocking the lock, if the battery is low, you will receive a prompt to replace the battery in a timely manner before unlocking the lock. It is recommended to replace the battery as soon as possible if it is running low. The battery can last for approximately 200 door openings, so it is important to replace it promptly when necessary.
4. Please do not scrape the surface with corrosive objects or sharp objects to avoid damage to the lock surface.
5. When the battery is dead or the electronic part fails, you can use the emergency key unlock the lock outside. Please properly press the tube key, and put it in a safe place outside.
6. After the installation, the door must be in an open state for debugging and initialization parameter setting.
7. Working temperature: -4°F(-20°C) -140°F (60°C).

► Packing List

S/N	Content	Quantity
1	Front lock	1
2	Rear lock	1
3	Lock cylinder(Including key*2)	1
4	Specification	1
5	Installation accessories package	1
6	Opening drawing	1

► Product Functional Characteristic



Password
Unlock



Fingerprint
unlock



APP
unlock



Key Unlock



Standard Lock
Cylinder




Beep
Reminder



Low Battery
Warning




Automatic
Locking

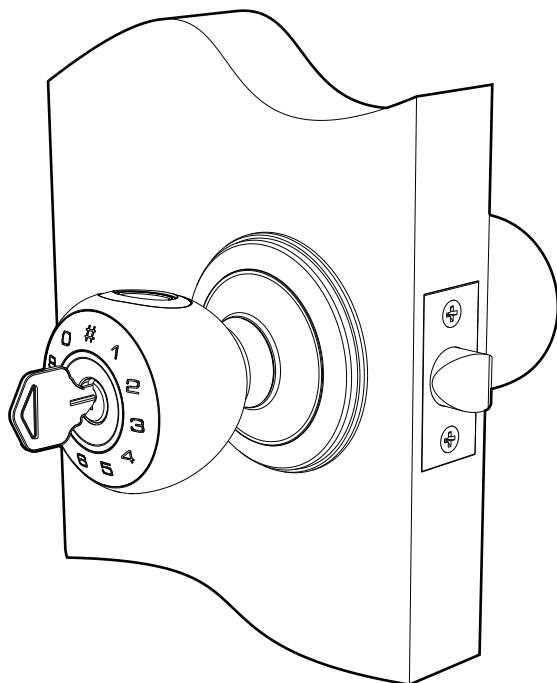

► Product Details Introduction

Fingerprint collection
(with reminder light)

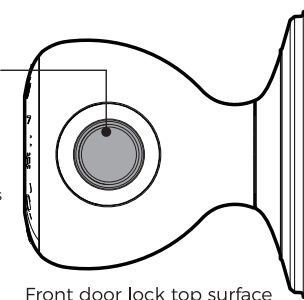


Front door lock top surface

Fingerprint Light
Red and green Indicator lights


Password keyboard

Mechanical keyhole

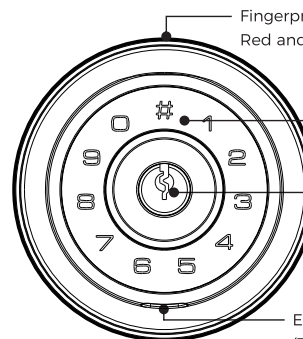


Front door lock body

Emergency power port
(TYPE C interface)

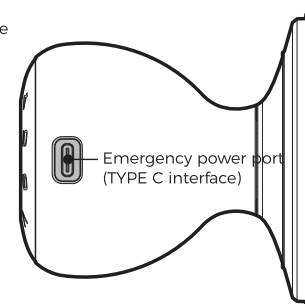


Front door lock bottom surface

Battery lid

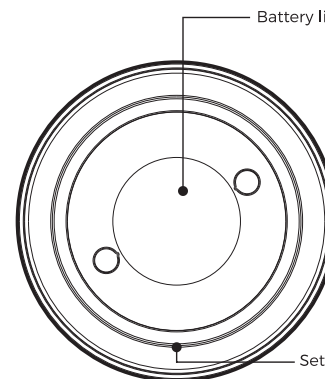

Rear door lock body


Setting key

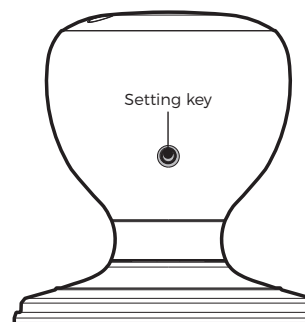


Rear door lock body

► Product Size

Front lock body
Unit: inches

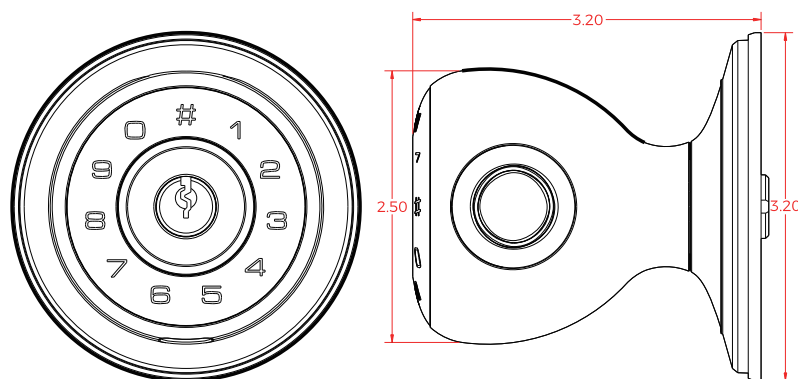


Back lock body
Unit: inches

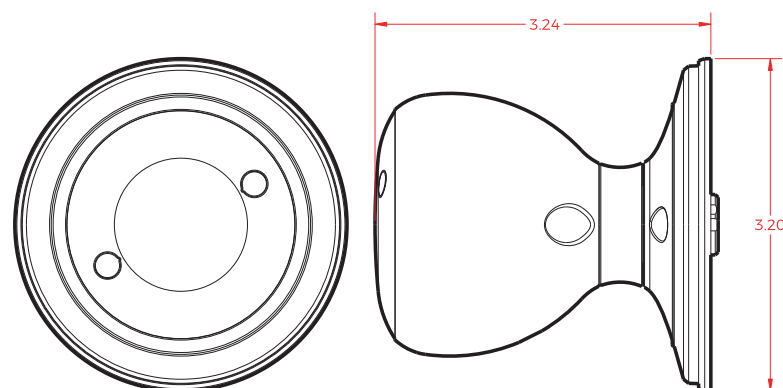

► Product Specifications and Menu Operations

Name	Content
Key category	password, fingerprint, app unlock and mechanical key
Password capacity	50 users (6-10 digit password)
Fingerprint Capacity	50 users
Power Supply	4 AAA alkaline cells
Remind	light and buzzer prompts
Low Battery Alarm	≤4.8V
Antistatic	contact +/-8KV Air +/-15KV
Stand-by Current	<80uA
Dynamic Power Consumption	<200mA
Working Environment	-4°F/-20°C~+140°F/+60°C
Operating Humidity	0%~95%

Button and Light Indication Functions

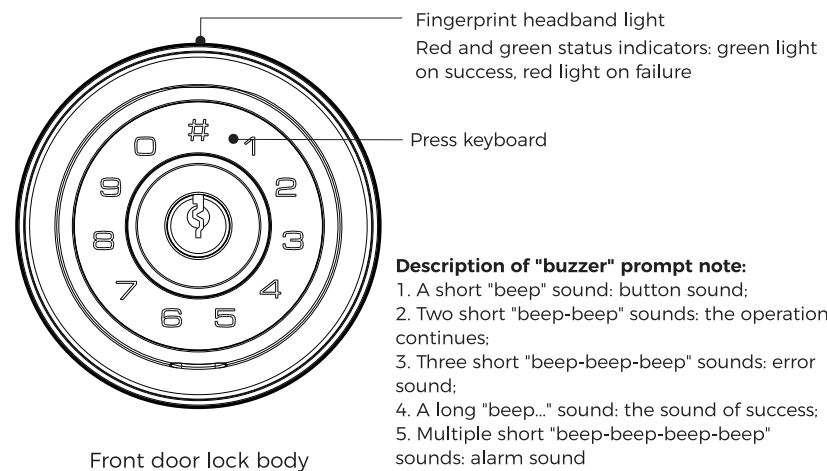


Front door lock body

► Operating Procedures

Operating Procedures

1. System Initialization

Press and hold the initialization button for 5 seconds, the blue light of the fingerprint head flashes once every second, and the buzzer beeps once every second. After 5 seconds, you hear a beep and press the front lock "#" key to confirm. You hear a long beep and the initialization is successful. After initialization, 123456+# and any fingerprint can open the door.

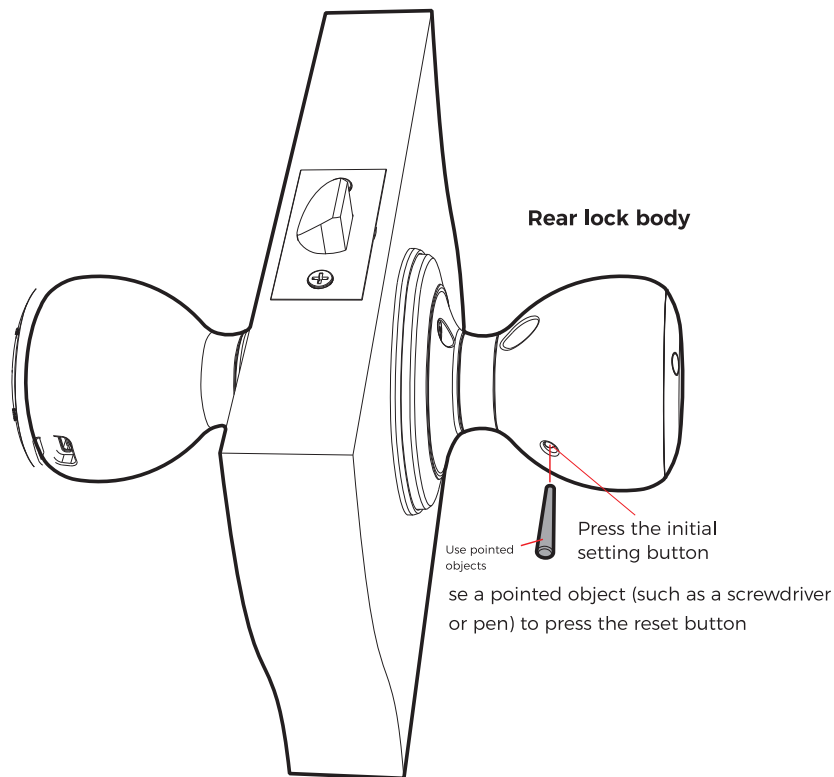

► Operating Procedures

2. Registered Ser

2.1 Registered Administrator (unregistered administrator):

In the default state, press the 1+# key, there will be two beeps and the blue light will be on. Enter the same 6-10 digit password twice. After one long beep and the green light will turn on, the system will prompt that the registration is successful.

2.2 Add an Administrator (an administrator password has been registered):

In the default state, press the 1+# key, "beep-beep" twice, the blue light is always on, verify the administrator, after a long beep after success, the blue light lights up, you need to press the fingerprint 5 times, and enter the password twice to register, press the confirm key to end, the system prompts with a long beep and a green light that the registration is successful, and the registration of the second administrator is successful.

2.3 Add Administrator (two administrator passwords have been registered):

In the default state, press the 1+# key, "beep-beep" twice, the blue light is always on, verify the administrator, after a long beep after success, the blue light lights up, you need to press the fingerprint 5 times, and enter the password twice to register, press the confirm key to end, the system prompts a long beep and a green light, indicating that the registration of the third administrator is successful.

2.4 Add Users (registered administrators 1-3)

In the default state, press the 1+# key, "beep-beep" twice, the blue light is always on, verify the administrator, after a long beep after success, the blue light lights up, you need to press the fingerprint 5 times, and enter the password twice to register, press the confirm key to end, the system prompts a long beep and a green light, indicating that the registration is successful, that is, the registration of a user is completed.

Operating Procedures

3. Other Perations

3.1 Lighting Prompts

Error message: The red light will be on for 2 seconds, and at the same time, the voice will sound "beep-beep-beep" three times. Correct tip: The green light stays on for 2 seconds. The short beep is for pressing the button only. Two beeps and beeps are used to wait for further operation.

3.2 System Lock

When the wrong password or fingerprint is entered 5 times, the system will be locked for 1 minute. When the system is locked, pressing any button again will prompt an "alarm sound". It will only be unlocked when the 1-minute countdown reaches 0, or it will be unlocked when the power is turned off and restarted. Locked.

3.3 Volume Switch Setting

Press "333+#" to switch the volume of mute, midrange and treble. After restoring to factory settings, the volume defaults to treble.

3.4 Normally Open Setting

After unlocking with fingerprint or password, press 78+# within 5 seconds to turn on or off the automatic locking mode.

3.5 Network Distribution Mode


If no user has been added, just search the Tuya APP for device binding and add it. After adding a user, press 3+# to prompt a beep sound, verify the administrator, and enter the network configuration mode. During the network configuration, the keyboard light flashes once per second, and the network configuration timeout is 120 seconds.

► Operating Procedures

Low Voltage Alarm

When the battery voltage is lower than 4.8V, after entering the correct password or fingerprint confirmation, you will hear a rapid sound of beep - beep - beep - beep (about 3-4 seconds) and then the motor will otate to remind the user in time The battery has been replaced.


When the battery is completely out of power, you can use the power bank to temporarily open the door and replace the battery.

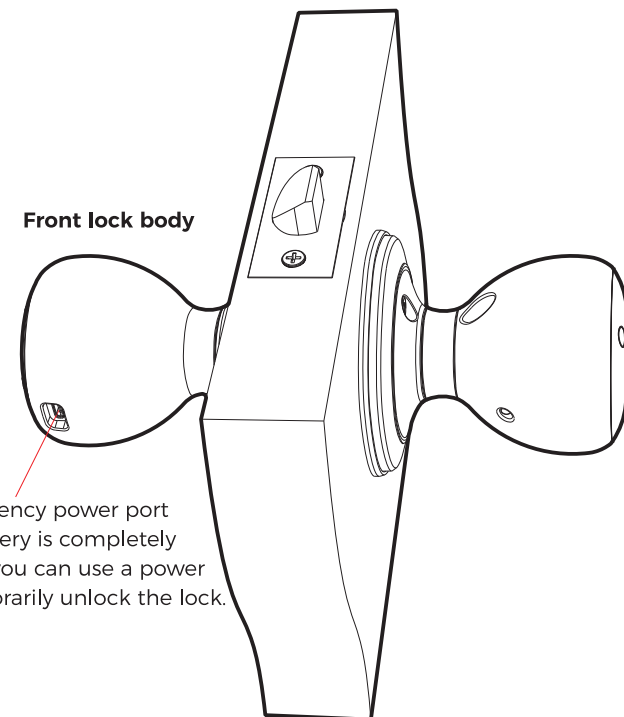

TYPE-C emergency power port
When the battery is completely out of power, you can use a power bank to temporarily unlock the lock.

► Precautions for Use


1. Any disassembly or assembly is prohibited
This product is composed of precision and complex components. Please do not disassemble or assemble the internal structure at will to avoid abnormal product operation or other use hazards. If you need to disassemble or assemble again, please contact a professional for operation.
2. Use cleaning methods with caution
Please use a dry cloth to clean this product. Do not wash it with water to avoid circuit failure.
3. Measures to deal with low or exhausted battery power
Low battery prompt: when unlocking, it will prompt "beep-beep-beep-beep" and the red light will flash at the same time.

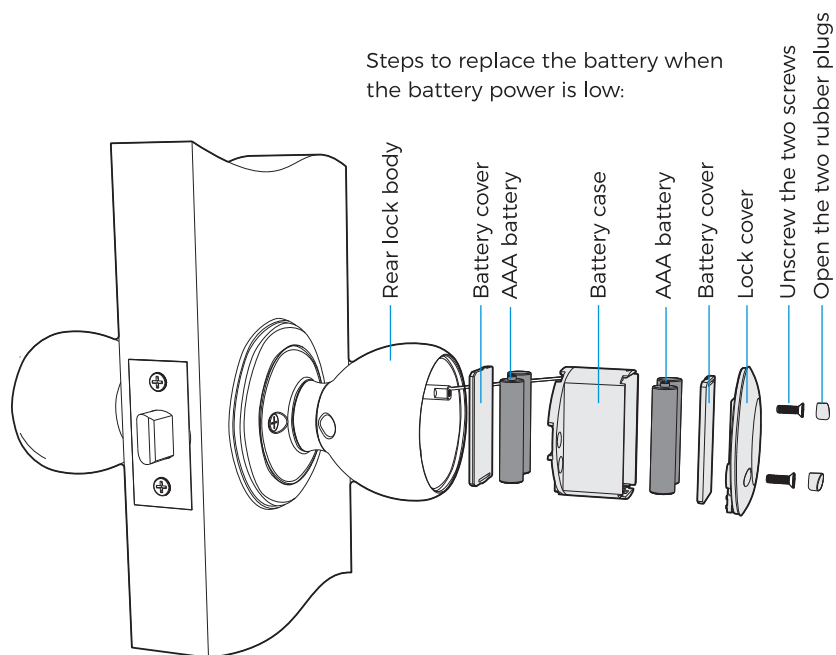

► Precautions for Use

Tuya Smart-App

Before using the App to configure the network, at least one password must be added to the door lock.

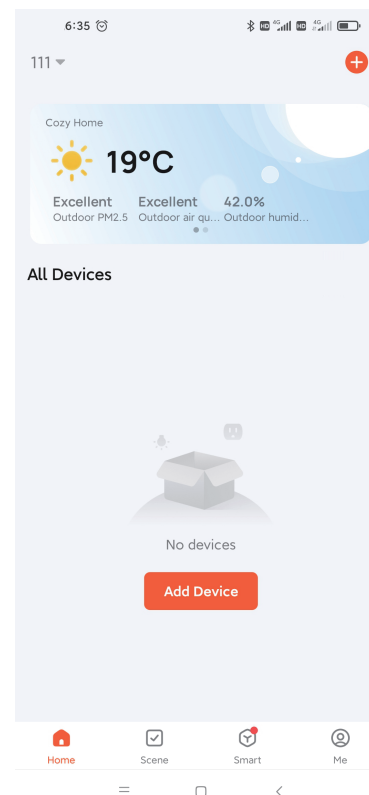




1. Door lock distribution network mode
When the lock has not been assigned to the network, or has been initialized, you can use your mobile phone to directly configure the network to take over the lock.

After the door lock is connected to the mobile phone, it needs to be restored to factory settings before it can re-enter the network distribution mode.



► Tuya Smart App User Instructions

Add Device

1. Select "Add Device"
2. Select "Add" (the door lock must be in network distribution status)
3. Wait for the door lock to be added successfully

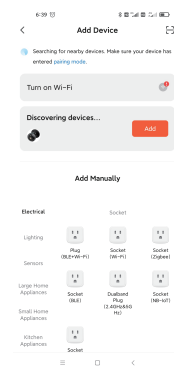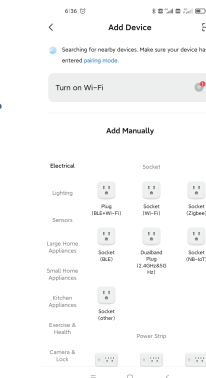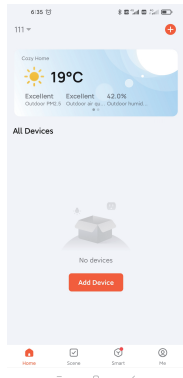

4. Added successfully, next step

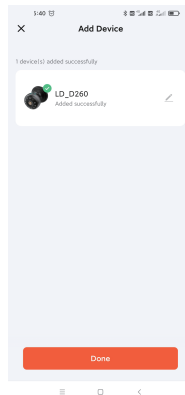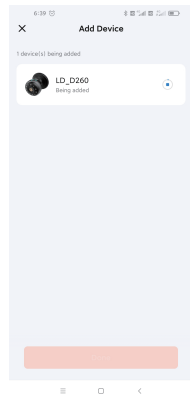


6. Door lock home page



► Tuya Smart App User Instructions


App Unlock

Open the APP and the following interface will appear. Press and hold the unlock button below to unlock.

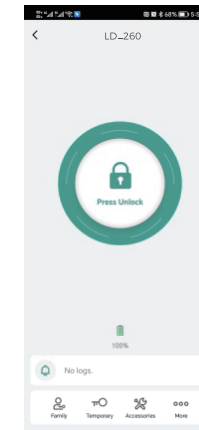

App Adds Fingerprint


Open the APP and the following interface will appear. Enter the fingerprint adding interface and complete the fingerprint entry process as shown below.

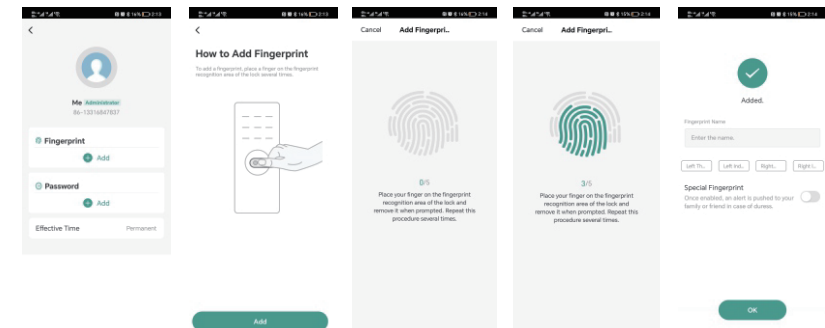

► Tuya Smart App User Instructions

App Unlock Records

Open the APP and the following interface will appear. When the lock is connected, the lock record will be automatically downloaded.

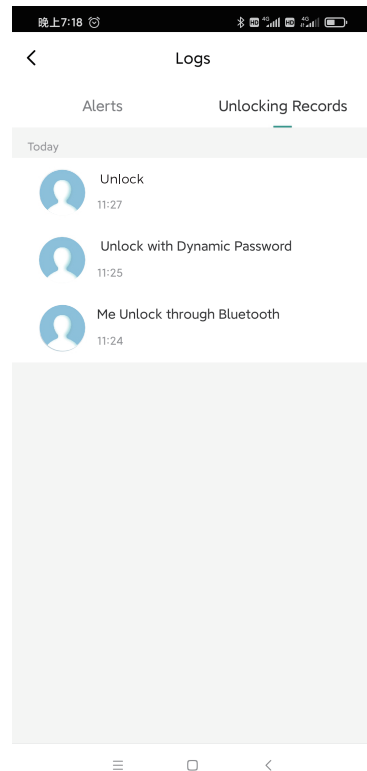

► Warranty card

Product Information

Product model		Purchase date		MM/DDIYY	
Address of purchase	City		(County)	Province	
Purchase price		Invoice No.			

The copy kept by customers

User name		Telephone		Postal code	
User address	City (County) Province				
Product satisfaction degree	Quality performance: <input type="checkbox"/> Good <input type="checkbox"/> General <input type="checkbox"/> Poor Appearance: <input type="checkbox"/> Good <input type="checkbox"/> General <input type="checkbox"/> Poor				
Application field	Family <input type="checkbox"/> Office <input type="checkbox"/> Hotel <input type="checkbox"/> Others <input type="checkbox"/>				
The first reason	Quality <input type="checkbox"/> Appearance <input type="checkbox"/> Function <input type="checkbox"/> Price <input type="checkbox"/> Service <input type="checkbox"/> Word-of-mouth <input type="checkbox"/> Other <input type="checkbox"/>				
Your suggestion					

In order to ensure your benefits to get the "repair, refund and replacement guarantees" ("three guarantees" for short) from our company, please note:

1. When purchasing the product, please fill out the card completely, correctly and truthfully.
2. Please ask for the invoice or voucher at the time of purchase.
3. Please take good care of the card, the valid "three guarantees card" and valid purchase voucher are the preconditions to realize your rights of "three guarantees".
4. Please take good care of attachments and information for the items. If there is any good return, you need to return the whole set.

The following situations are not within the scope of quality warranty:

1. Warranty period expiry;
2. No invoice or voucher at the time of purchase, no valid guarantee voucher, or the counterfeit and shoddy products;
3. Incomplete outer packing at the time of return of products, incomplete accessories, or users disassemble privately and repair on their own, etc.;
4. Damage resulting from personal factors: Such as break, soaking, fierce hit, use under super high temperature, put beside the high magnetic products for a long time, etc.;
5. Sellers' secondary sales of the product is affected by human causes;
6. No product serial number, the product number is damaged and the product identity cannot be proved;
7. Product damage due to natural disasters such as acts of god;
8. Damage due to failure to use and assemble as per the operation manual.

Note:

1. The power of interpretation for the content of the card is owned by our company;
2. Presented gifts are outside of the service range;
3. Only the records filled in by institutions and engineers with the maintenance qualification authorized by our company are valid;
4. The service records are just limited to the content stipulated by "three guarantees", for details, please refer to relevant regulations of the state.

► Warranty

- We provide 30 days worry-free money back and one year limited warranty. Any problem, please feel free to contact us.
- E-mail us at: **support@arpha.com**